


GOLD SD 120, eff.var./cap. var. 2

Med styrenhet, utan
batterivärmeväxlare/
With control
unit, without coil
heat exch.

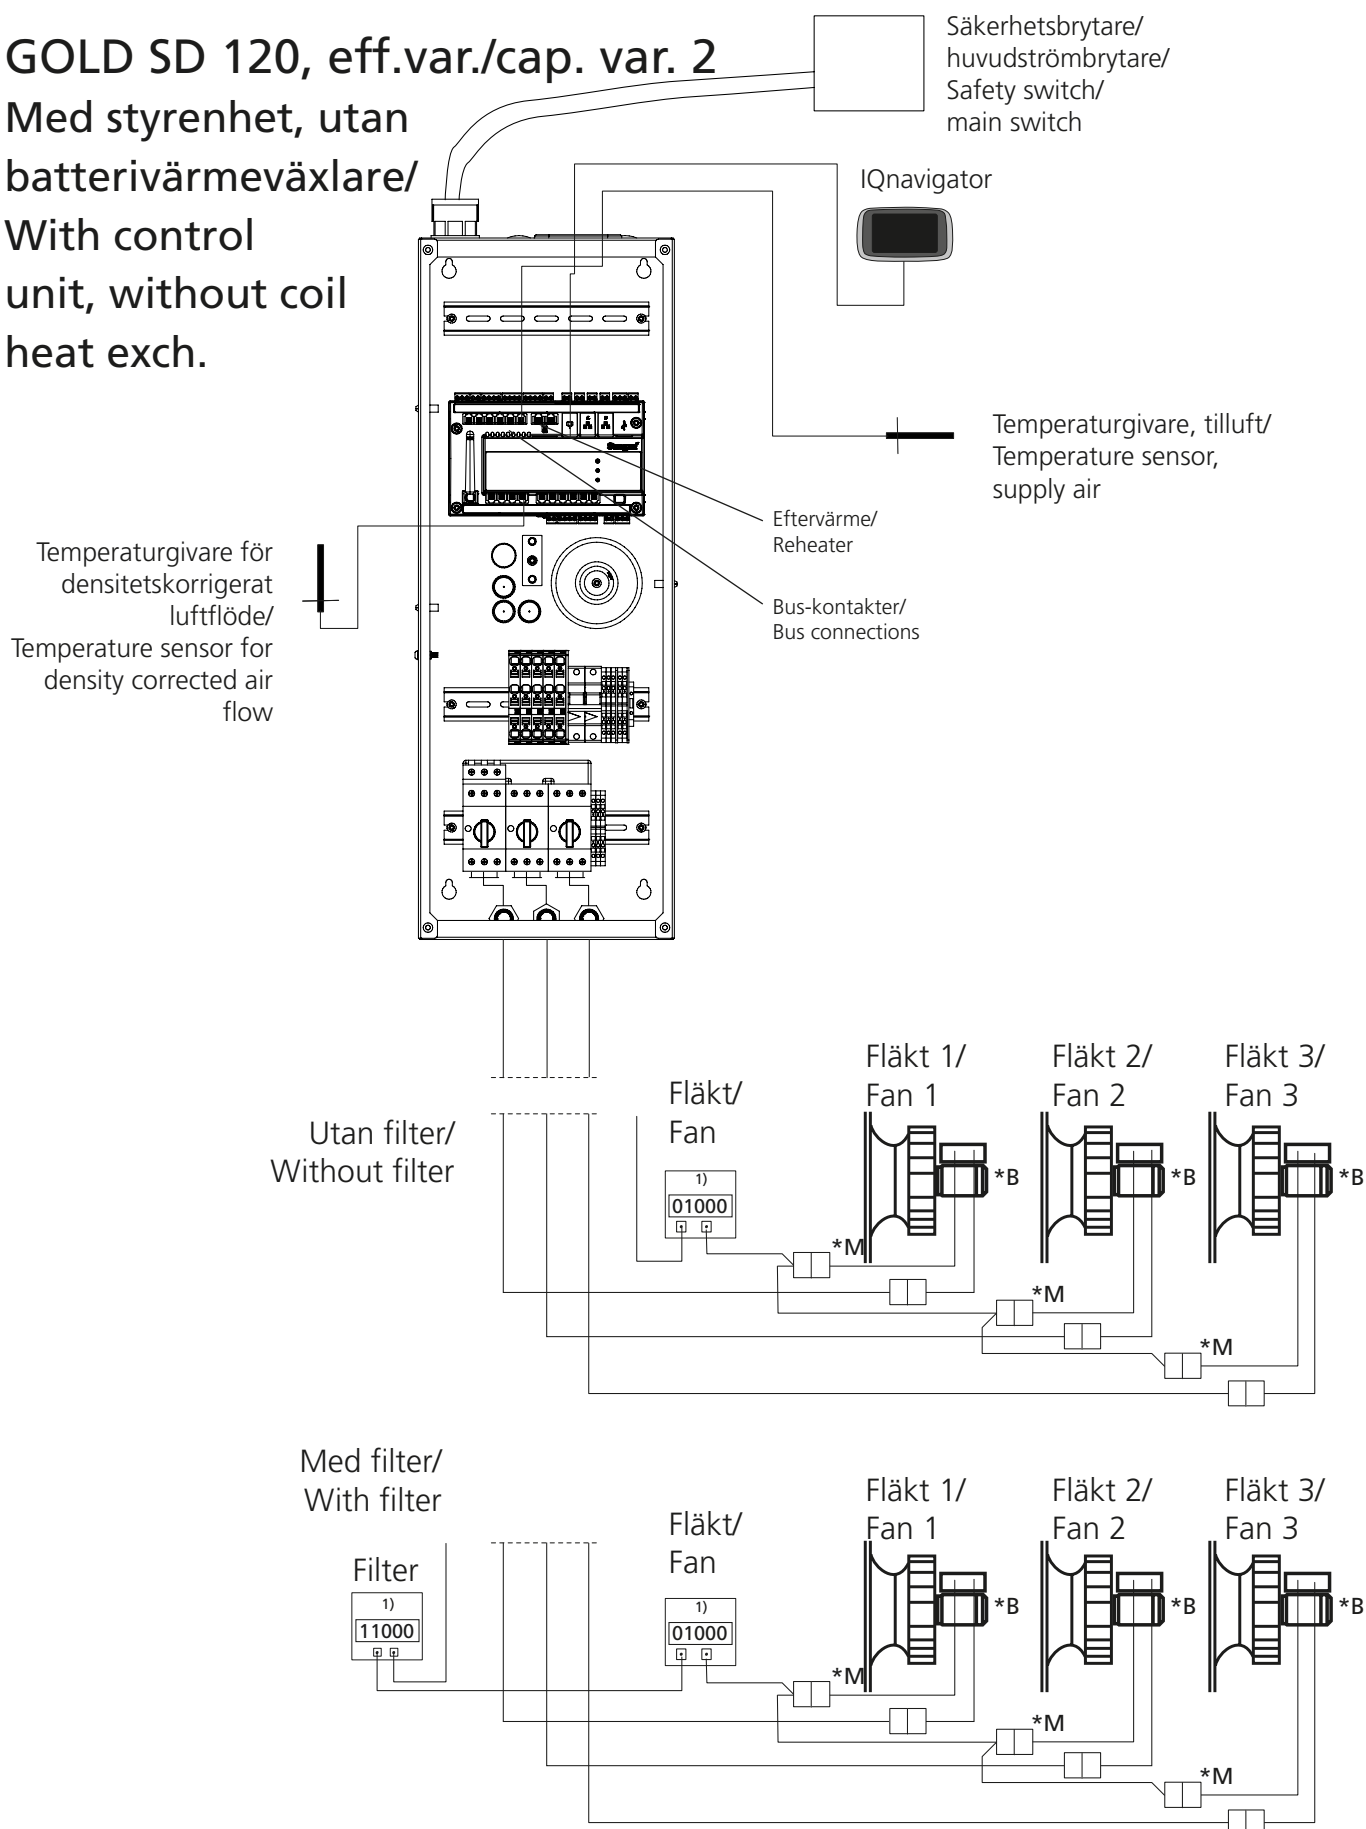

¹⁾ Inställning DIP-switch. Switch nr. 1-5. 1 = On, 0 = Off./
Settings DIP switch. Switch no. 1-5. 1 = On, 0 = Off.

GOLD SD 120, eff.var./cap. var. 2


Utan styrenhet, utan

batterivärmeväxlare/

With control

unit, without coil

heat exch.

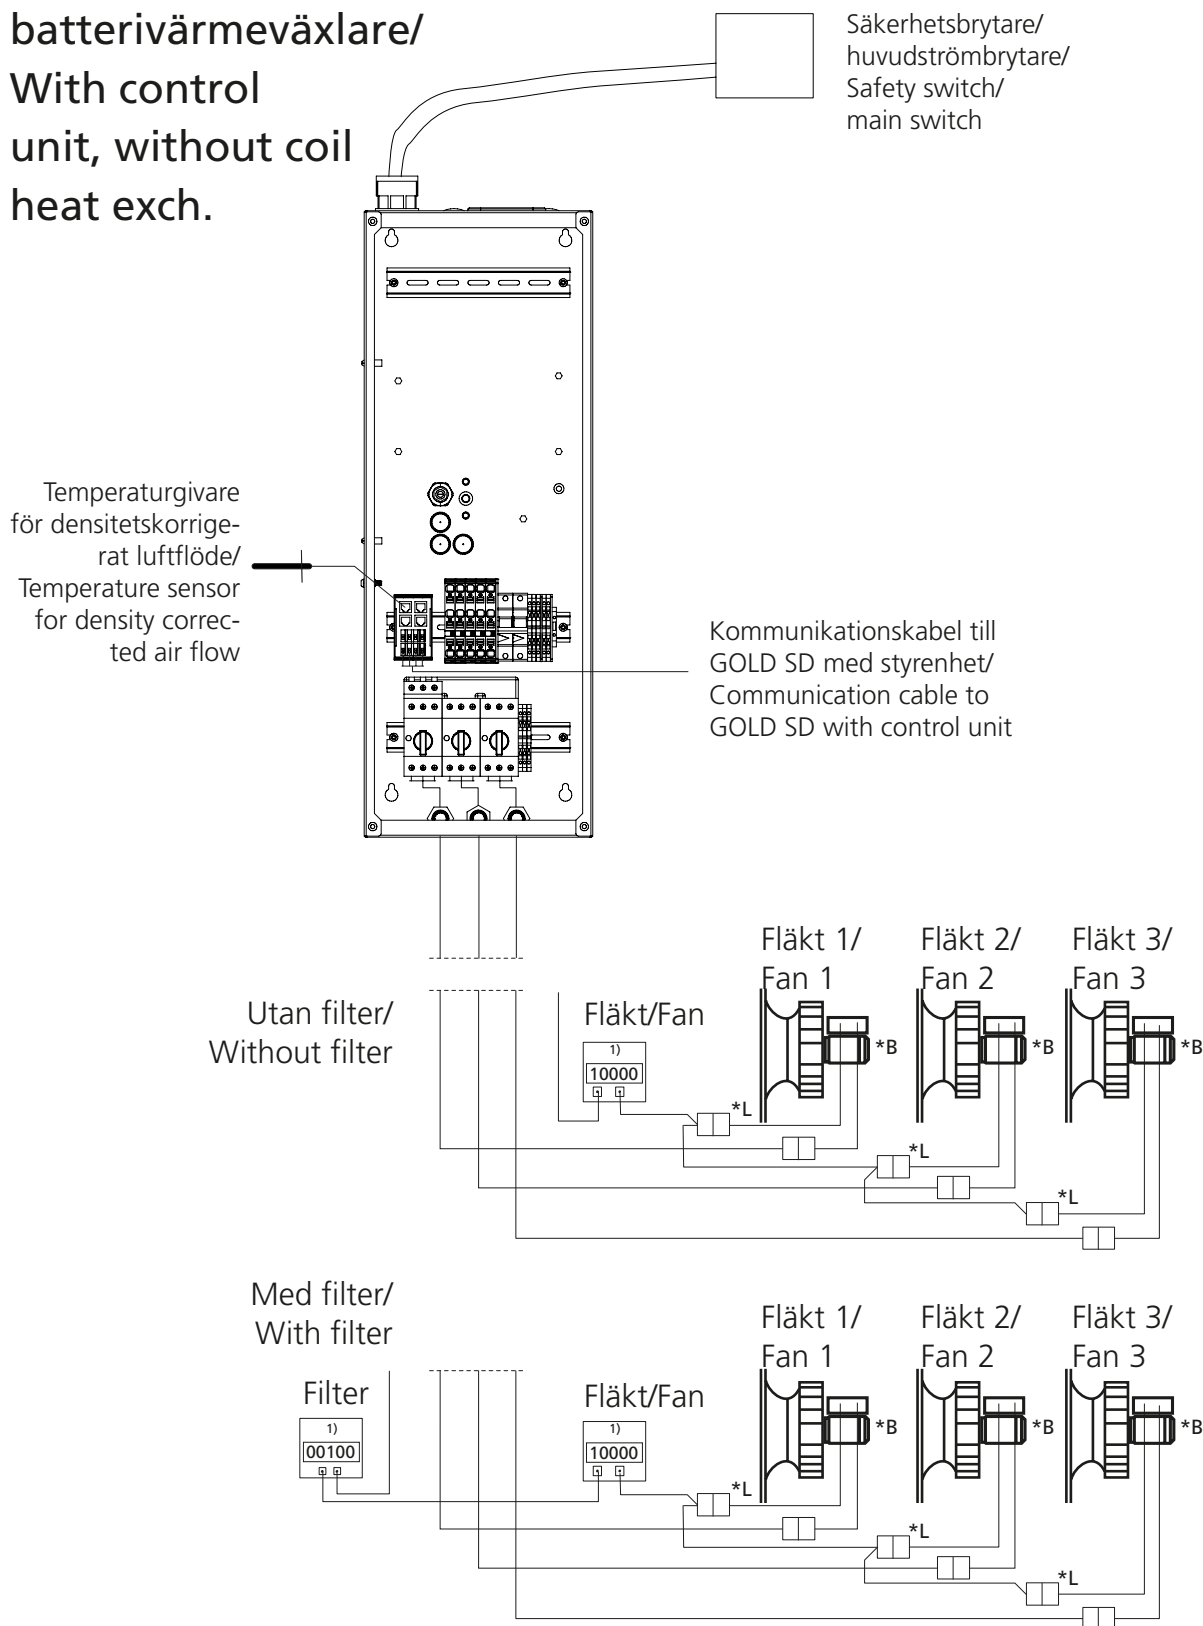


¹⁾ Inställning DIP-switch. Switch nr. 1-5. 1 = On, 0 = Off./
Settings DIP switch. Switch no. 1-5. 1 = On, 0 = Off.


GOLD SD 120, eff.var./cap. var. 2

Sammankoppling av aggregat med styrenhet
till aggregat utan styrenhet/


Connecting AHU with control unit to AHU without control unit

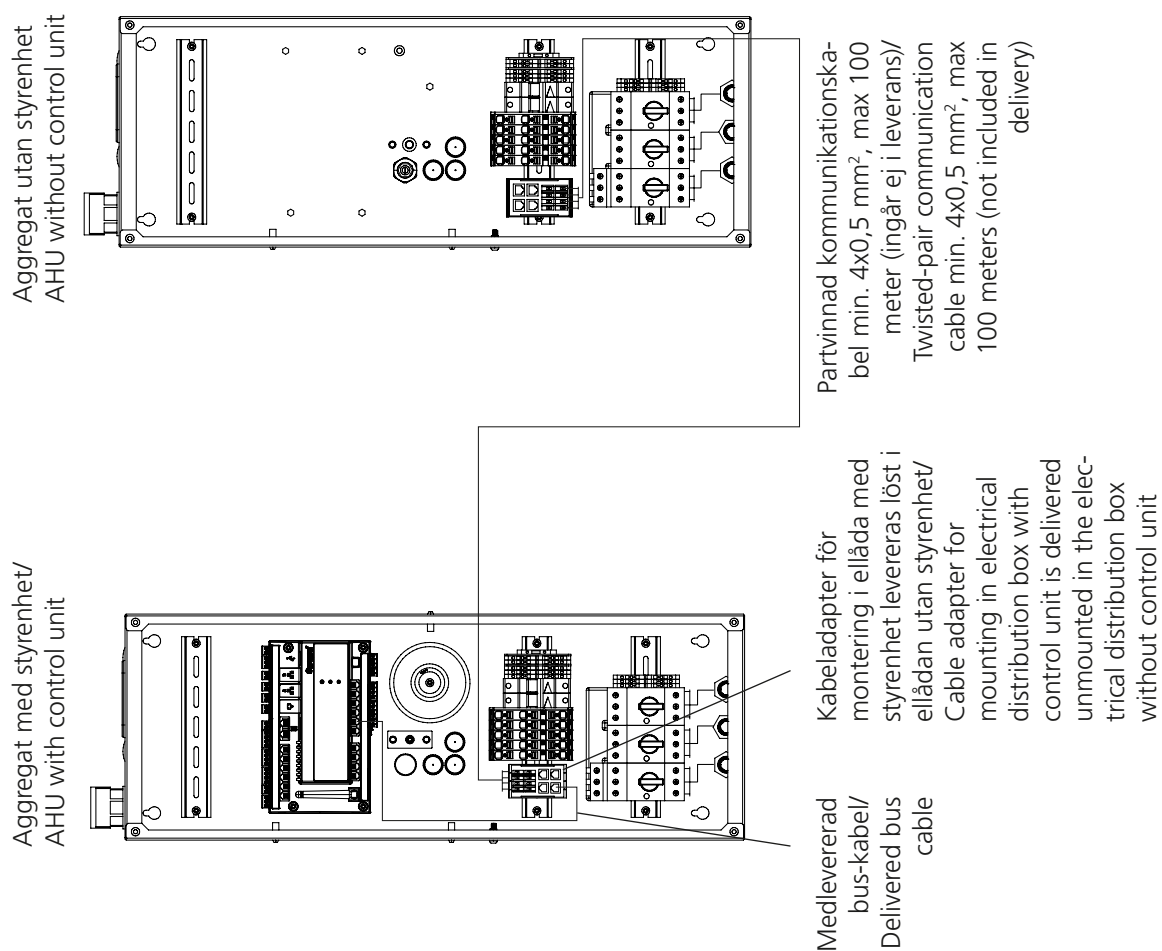


B:
Alt. 1: GOLD RX/PX/CX/SD14-120

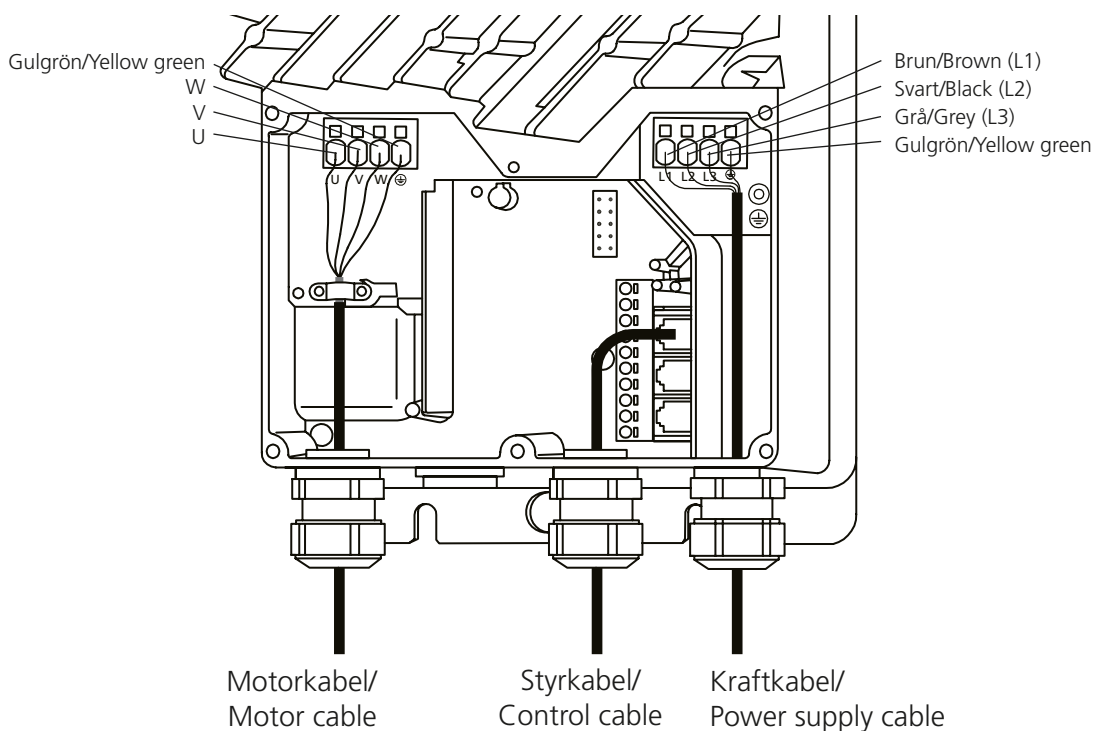

Alt. 2: GOLD RX/PX/CX/SD14-120

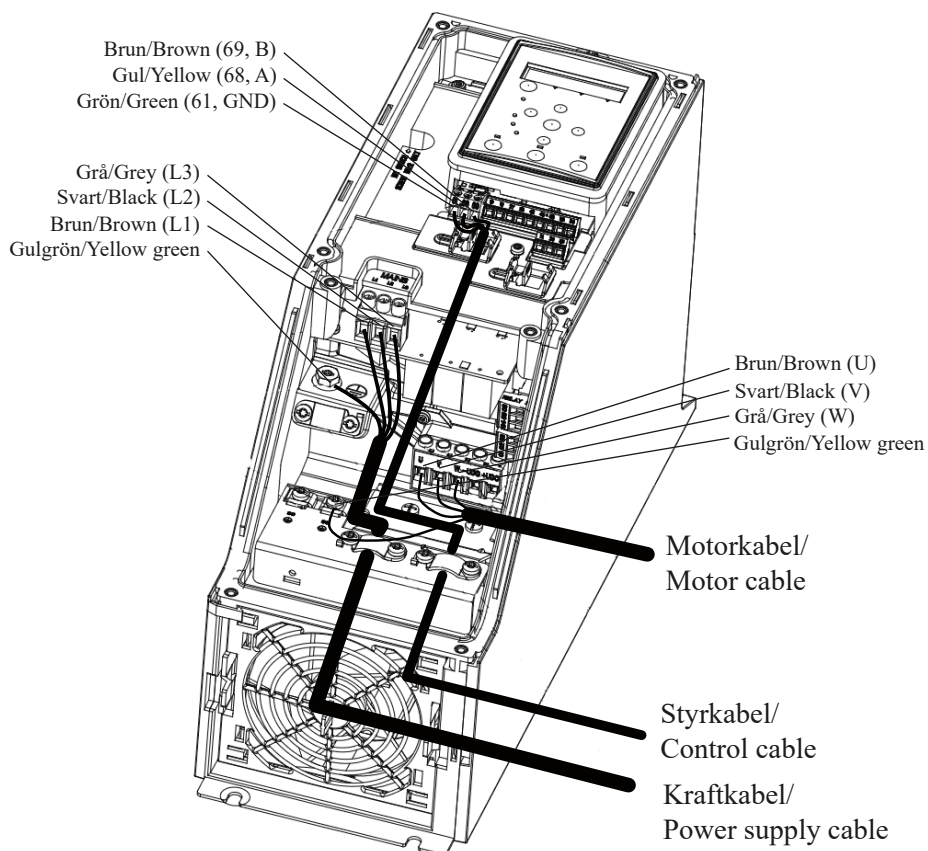

L: GOLD RX/PX/CX/SD 120

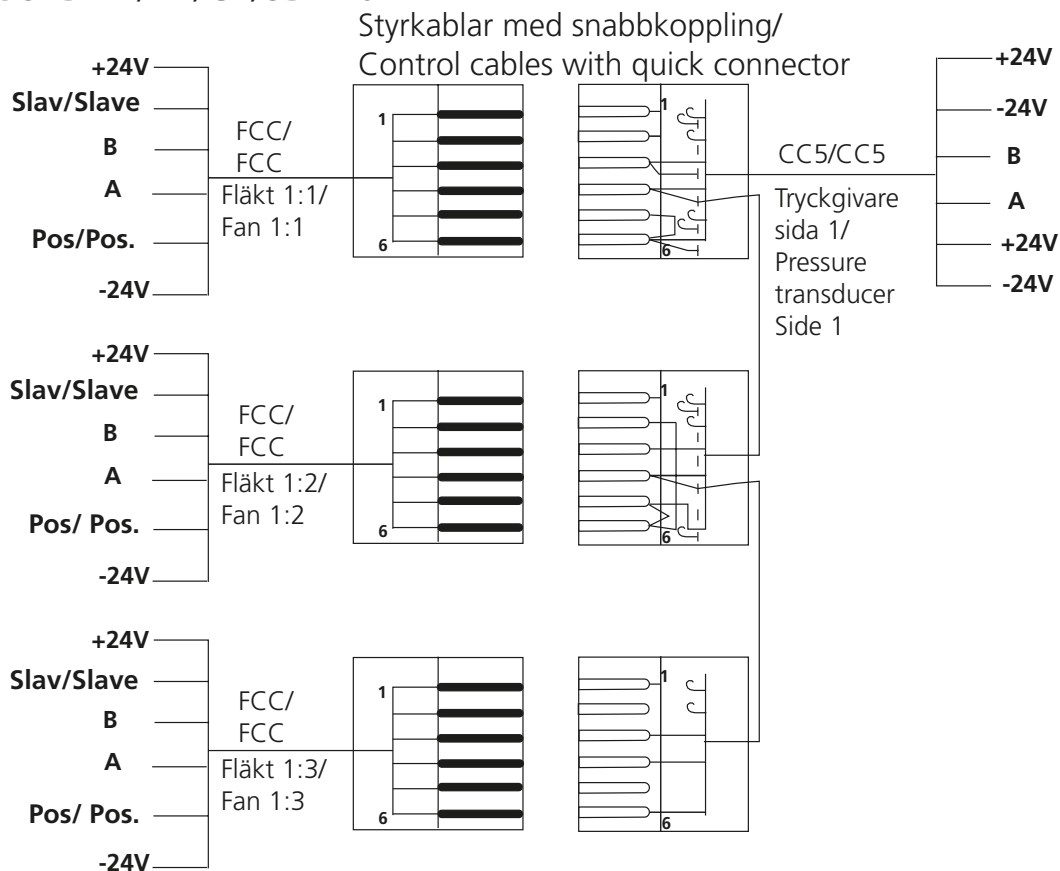

M: GOLD RX/PX/CX/SD 120

